

QUICK INSTALLATION GUIDE. Refer to Manual for full installation instructions


Rev C. June 2025

MICRO-METER Pn: CWS-UM-3P-1000

Turn
ON/OFF
External
Relay

Serial
Port
(UART)

Programming Port

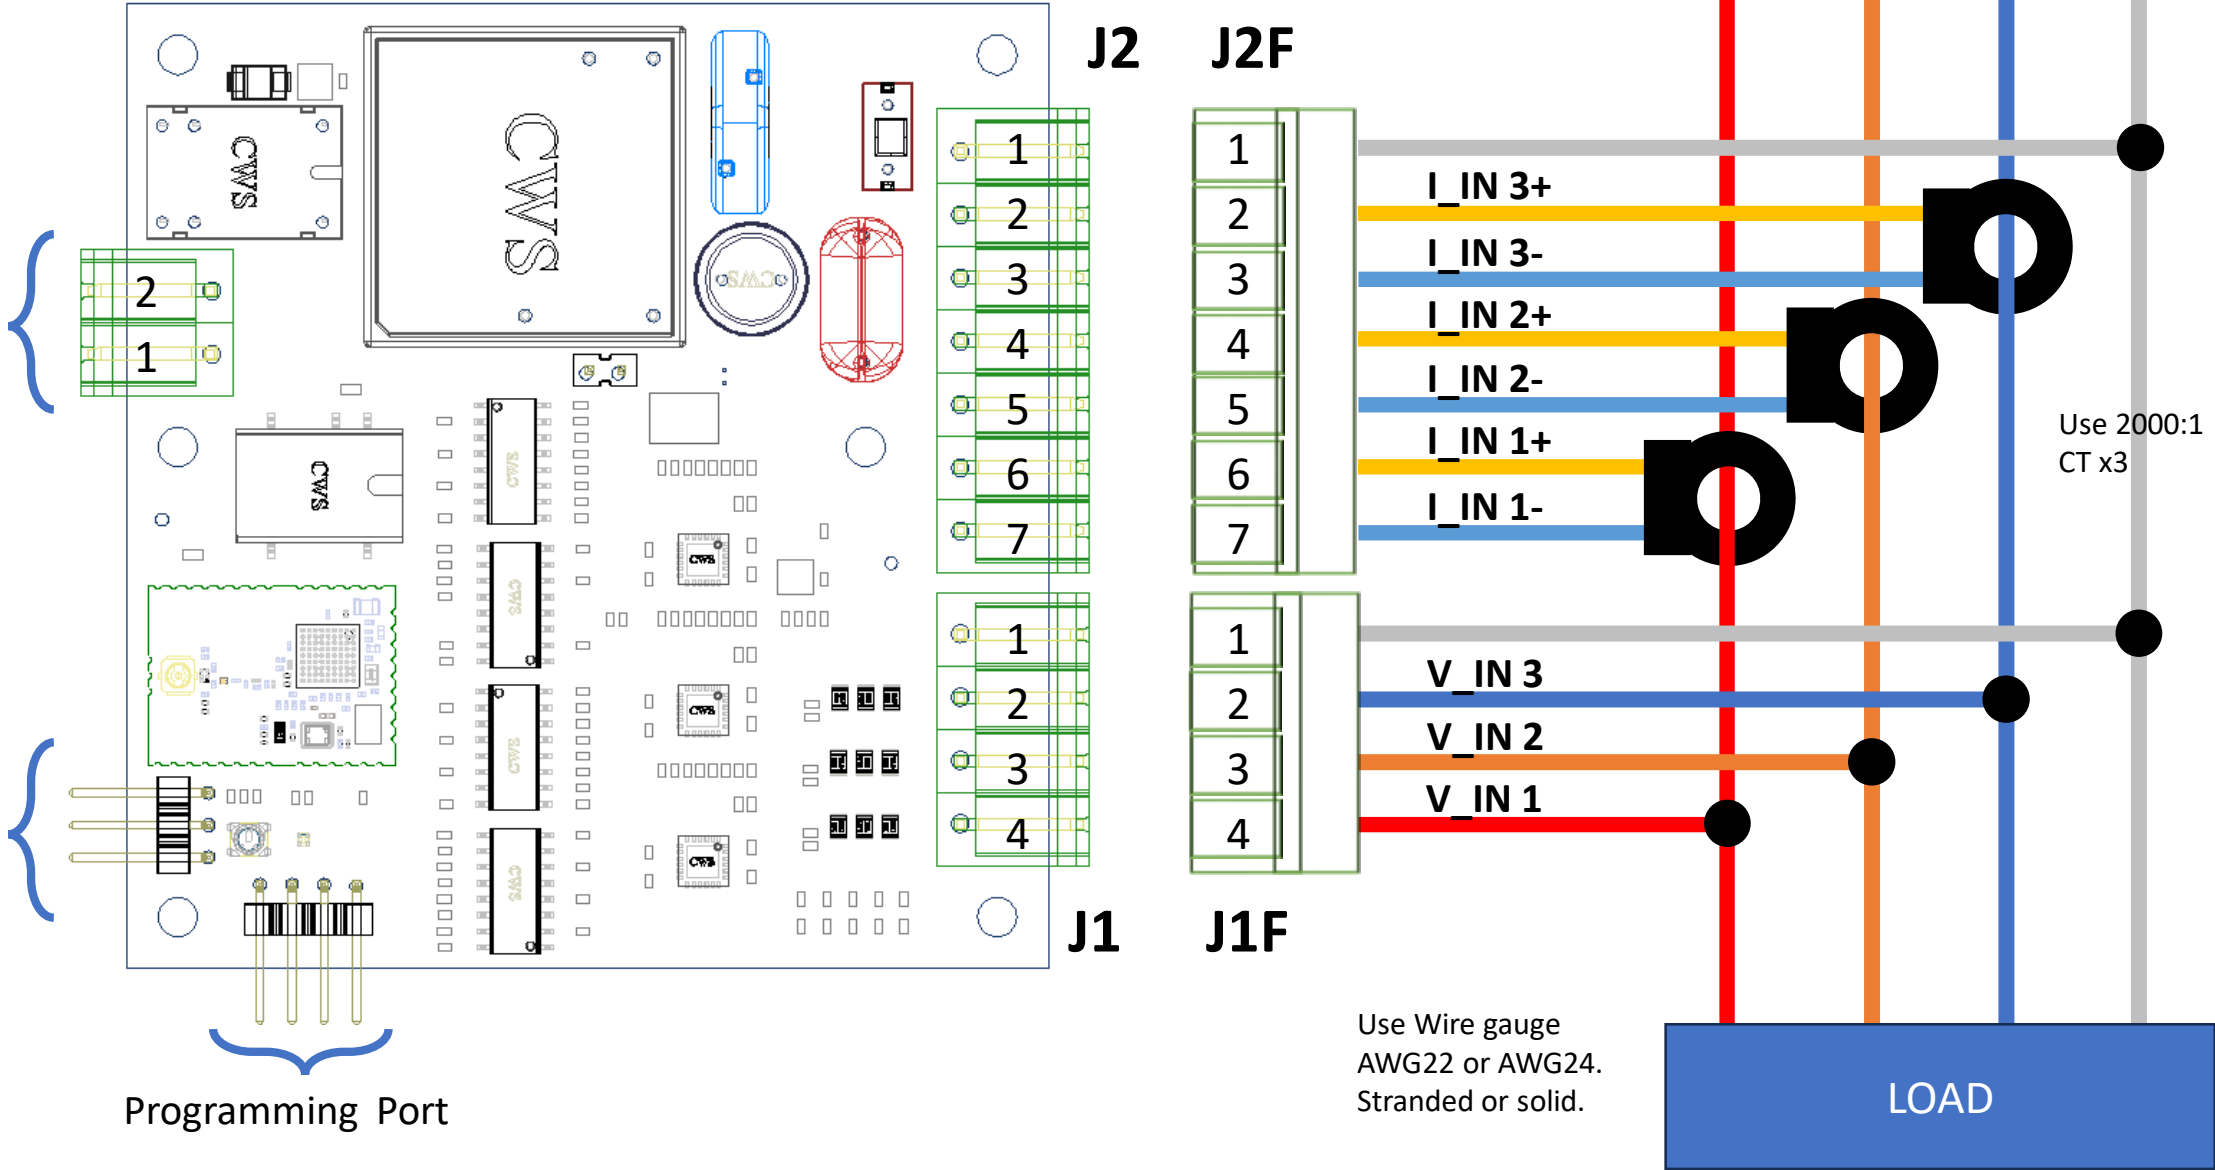

Connectors type for the AC Line Voltage Inputs

J1 [2350513-4 TE Connectivity AMP Connectors | Connectors, Interconnects | DigiKey](#)

J1F [1986484-4 TE Connectivity AMP Connectors | Connectors, Interconnects | DigiKey](#) Or Equivalent

J2 [2350513-7 TE Connectivity AMP Connectors | Connectors, Interconnects | DigiKey](#)


J2F [1986484-4 TE Connectivity AMP Connectors | Connectors, Interconnects | DigiKey](#) Or Equivalent

MICRO-METER Pn: CWS-UM-3P-1000

Use this to turn off or turn on the external contactor for Demand Response. See manual

Turn ON/OFF External Relay


Serial Port (UART)

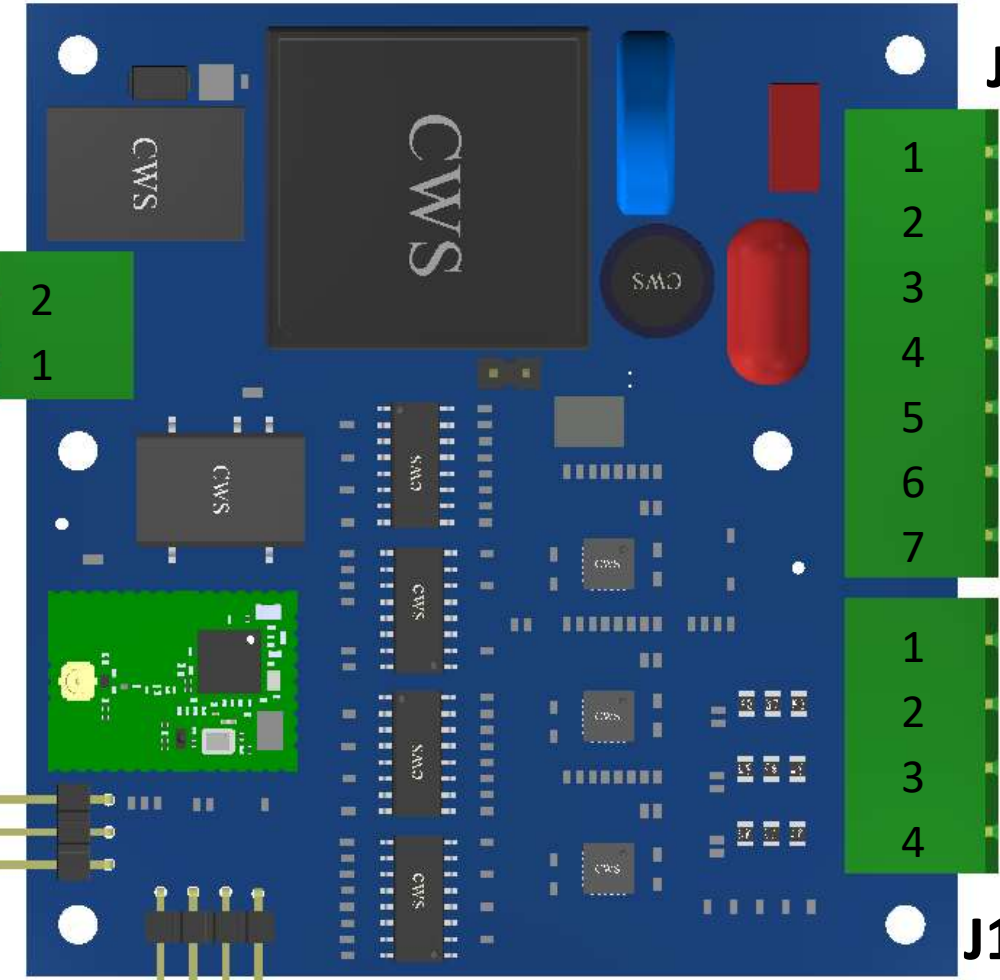

Programming Port

Do not connect to UART or Programming Port. For Internal CWS use only

AC LINE VOLTAGE INPUT

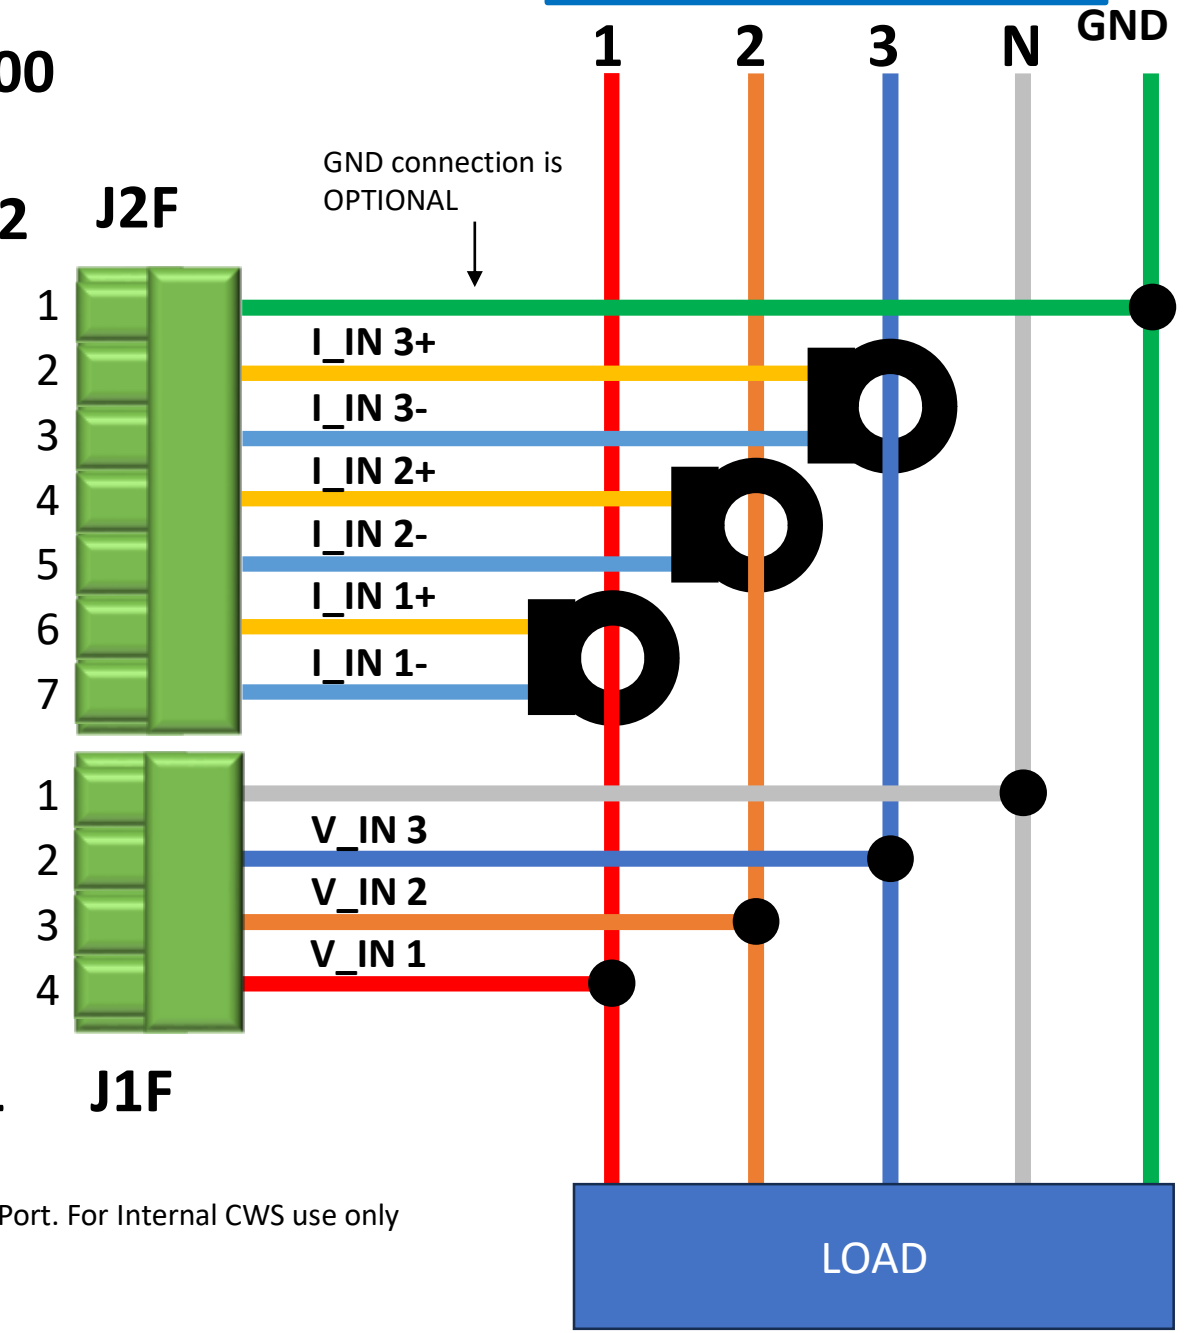

LOAD

MICRO-METER Pn: CWS-UM-3P-1000

